

INSTALLATION:

INSTALL THE RC-LINK ACCORDING THIS SCHEME:



- CHOOSE A FREE RX CHANNEL OR THE FUTABA® SBUS / SBUS2
- CONNECT THE IISI-LINK TO THE COCKPIT V2
- SELECT RX CHANNEL OR SBUS
- FOR SBUS, SELECT UP TO 4 CHANNELS (FROM THE 18 CHANNELS + FAILSAFE SIGNAL)
- CONNECT THE IISI-LINK TO YOUR TXE
- PROGRAM ACTIONS ON YOUR COCKPIT

TECHNICAL DATA:

- VOLTAGE RANGE: 4 - 16V (HV COMPATIBLE)
- WEIGHT: 6G
- SIZE: 30 X 11 X 6 MM

FEATURES:

- COMPATIBLE WITH ANY 1.5MS CENTER PULSE AND SBUS / SBUS2
- USE A 3 POSITION SWITCH TO PROGRAM ACTIONS ON YOUR COCKPIT V2:
 - VOICE OUTPUT (ANY DATA, REPEATABLE)
 - CHANGE SCREEN
 - ZOOM VALUE
 - STOP ANY ANNOUNCEMENT
 - VARIO BEEPS ON / OFF
 - PLAY ANY SOUND, INCLUDING YOUR OWN
 - MORE ACTIONS THROUGH SW-UPDATE
- 2 DIFFERENT OPERATION MODES
- DOUBLE CONNECTOR FOR RX SIGNAL RE-USE

SAFETY INSTRUCTIONS:

ASK A COMPETENT PERSON TO ASSIST YOU IN CASE OF ANY DOUBT!
DO NEVER SHORT CIRCUIT ANY WIRES
NEVER CONNECT ANY IISI-LINK TO A RX OR TO A BATTERY, THE DEVICE WILL BE DAMAGED

READ THE INSTRUCTIONS OF ALL COMPONENTS BEFORE USE!



WWW.IISI-RC.COM

